

FIXED TOP SASH ON A DOUBLE HUNG WINDOW

1. TILT IN BOTTOM SASH
2. ENSURE THE TOP SASH IS ALL THE WAY UP AND PLACE THE PIVOT PIN DIRECTLY UNDER THE BALANCE SHOE AS SHOWN. USE PROVIDED SCREWS TO SECURE PIVOT PIN IN PLACE.

